


Extending section by section from the top of the fishing rod

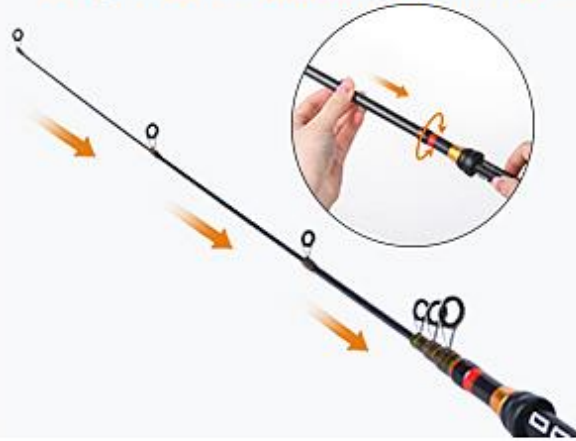

Rotate the junction of the two sections, collapsing the rod begins at the bottom of the rod!



Kindly Tips: Please don't push the rod too hard to avoid getting stuck.



Switch the position of the reel handle and the screw. So fishing reel can support left and right hands.



After fishing, wipe it clean with a cloth before taking it down so you don't jam dirt into the joint. Unscrew the bottom cap to drain.



We recommend using fishing nets to catch the fish ashore and avoid directly dragging the fish with the fishing rod, as this will damage the fishing rod.

