

● Function Introduction

1. How to power it on?

Press and hold the MODE button on the machine for a few seconds to power on when the battery is charged or the machine is connected to power.

2. How to power off?

While in the power-on state, press and hold the MODE button on the machine or press the power-off button of the remote control to power off. (After 10 seconds of powering off with the remote control, the machine will be completely powered off and can be powered on again by pressing the MODE button for a few seconds.)

3. How to play a CD?

Prepare the CD and place it on the CD tray. Press and hold the MODE button to power on the machine (it defaults to CD mode with a green light). The CD will start spinning and after about 10 seconds of reading, the music will start playing.

4. How to use the Bluetooth function?

With the machine powered on, press the MODE button once or press the Bluetooth button on the remote control to switch to Bluetooth mode. The machine light will turn blue and start flashing. Then, go to the Bluetooth settings on your mobile device, search for "CD Bluetooth," and pair and connect to it. The light will stay solid blue. You can now play music from your mobile device through the Bluetooth connection.

5. How to play music from a USB drive?

While the machine is powered on, simply insert the USB drive. It will read the data briefly and start playing the music.

6. How to connect external speakers?

Use an AUX audio cable to connect one end to the CD player's headphone jack and the other end to the audio input on your external speakers. The music will play through the connected speakers.

7. How to use the A-B repeat function?

Press the A-B button on the remote control at the beginning of the section you want to repeat. Press the A-B button again at the end of the section. The player will repeat playing that section. Pressing the A-B button again will cancel the A-B repeat function.

8. How to select the play mode in CD mode?

While the CD is playing, press the repeat button on the remote control to cycle through different play modes: random play, all tracks repeat, single track repeat, and normal play.

9. How to fast forward or rewind?

(1) Fast forward: Press and hold the Next Track button on the machine or the remote control.

10. How to Connect Bluetooth Headphones & Bluetooth Speakers (Bluetooth Transmitter models only)?

(1) Using the remote control, press and hold the Bluetooth icon button for 3 seconds, or on the device, press and hold the Play/Pause button for 3 seconds to switch to Bluetooth transmitting mode.

(2) Put your Bluetooth headphones or Bluetooth speakers into pairing mode.

(3) The device will automatically connect to the paired Bluetooth headphones or speakers.

Please refer to this user manual for a detailed description of all the features and functions of the portable Bluetooth CD player. If you encounter any problems or have further questions, please refer to the troubleshooting section or contact our customer support.

Note: The specifications and features mentioned in this user manual are subject to change due to product improvements, if you have any problems using the product, please contact customer support via the shop back office to resolve the problem, thank you for your understanding!!!